


OPERATING MANUAL

ba75586d07 08/2019

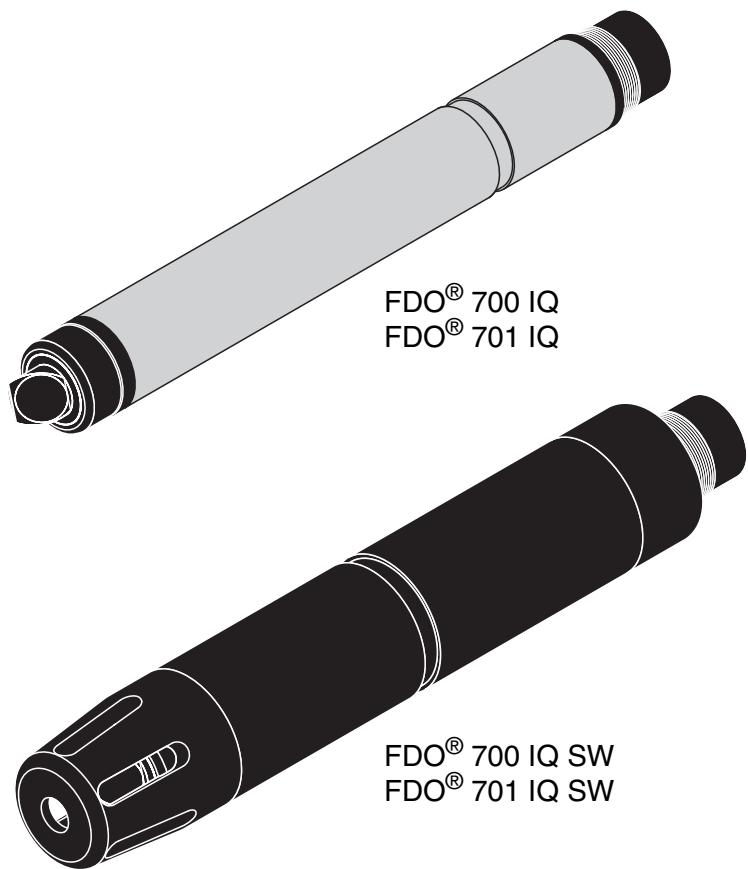

FDO® 70x IQ (SW)

IQ SENSOR NET - OPTICAL D.O. SENSORS



a **xylem** brand

FDO® 70x IQ (SW) - Contents

1	Overview	5
1.1	How to use this component operating manual	5
1.2	Models	5
1.3	Recommended fields of application	6
1.4	Structure	7
2	Safety	9
2.1	Safety information	9
2.1.1	Safety information in the operating manual	9
2.1.2	Safety signs on the product	9
2.1.3	Further documents providing safety information	9
2.2	Safe operation	10
2.2.1	Authorized use	10
2.2.2	Requirements for safe operation	10
2.2.3	Unauthorized use	10
3	Commissioning	11
3.1	Scope of delivery	11
3.2	IQ SENSOR NET system requirements	11
3.3	Installation	11
3.4	Commissioning / Getting the sensor ready for measurement	13
3.5	Setting table for the FDO® 70x IQ (SW)	13
4	Measurement / operation	17
4.1	Measuring	17
4.2	Function check and user calibration	17
4.2.1	General information	17
4.2.2	Function check	18
4.2.3	User calibration	19
4.2.4	Calibration history	21
4.2.5	Reactivating a valid calibration	22
5	Maintenance, cleaning, replacement parts	23
5.1	General maintenance notes	23
5.2	Handling of the sensor cap	23
5.3	Exchanging the sensor cap	24
5.4	Cleaning the sensor	25
5.4.1	Exterior cleaning	25
5.4.2	Interior cleaning of sensor cap and sensor head	25

5.5	Replacement parts and accessories	26
5.6	Disposal	27
6	What to do if...	28
7	Technical data	30
7.1	General measurement characteristics	30
7.2	Application conditions	30
7.3	General data	31
7.4	Electrical data	32
7.5	Technical data of the SC-FDO® 700	32
7.6	Technical data of the SC-FDO® 701	33
8	Indexes	35
8.1	Explanation of the messages	35
8.1.1	Error messages	35
8.1.2	Informative messages	37
8.2	Status info	38

1 Overview

1.1 How to use this component operating manual

Structure of the IQ SENSOR NET operating manual

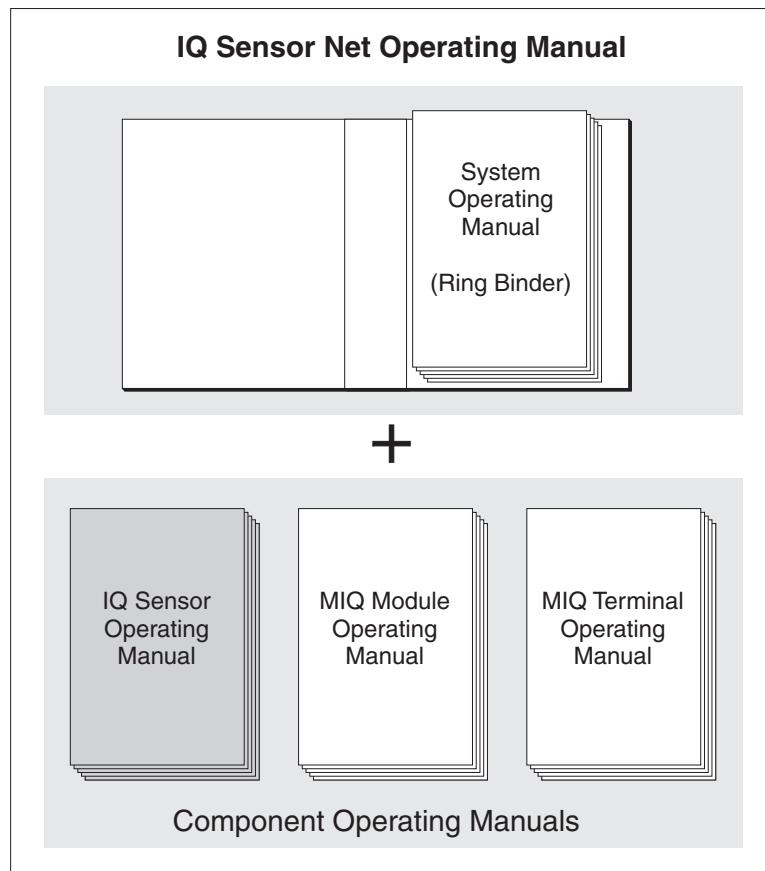


Fig. 1-1 Structure of the IQ SENSOR NET operating manual


The IQ SENSOR NET operating manual has a modular structure like the IQ SENSOR NET system itself. It consists of a system operating manual and the operating manuals of all the components used.

Please file this component operating manual into the ring binder of the system operating manual.

1.2 Models

The FDO® 70x IQ (SW) consists of a sensor basis equipped with differ-

ent sensor cap types, depending on the model:

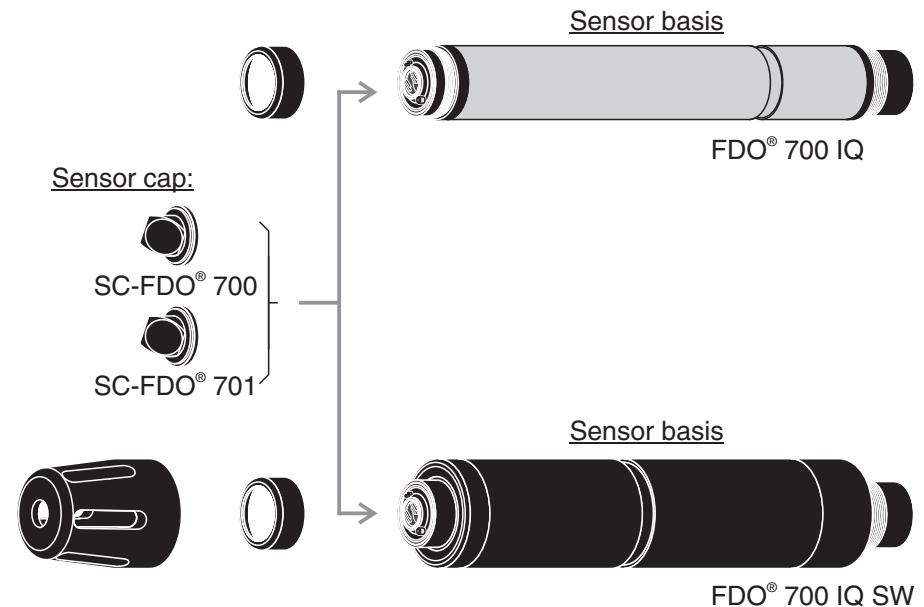

Variants	Sensor model	Sensor basis *	Sensor cap
	FDO® 700 IQ	FDO® 700 IQ	SC-FDO® 700
	FDO® 700 IQ SW	FDO® 700 IQ SW	SC-FDO® 700
	FDO® 701 IQ	FDO® 700 IQ	SC-FDO® 701
	FDO® 701 IQ SW	FDO® 700 IQ SW	SC-FDO® 701

* Designation on the name plate in the plug head connector

The sensor cap primarily determines the measuring characteristics of the sensor as a whole. Thus the sensor can be adapted to the measuring job by exchanging the type of sensor cap. The specifications of the individual sensor cap types are given in chapter 7 TECHNICAL DATA.

SW models	Compared to the standard models, the sea water models of the sensors (SW models) are optimized concerning their resistance to corrosion in sea water and brackish water.
------------------	--

1.3 Recommended fields of application

Sensor model	Recommended field of application.
FDO® 700 IQ FDO® 701 IQ	Stationary measurements in water/wastewater applications.

Sensor model	Recommended field of application.
FDO® 700 IQ SW FDO® 701 IQ SW	<p>Stationary measurements in seawater, aquaculture.</p> <p>The FDO® 70x IQ SW is equipped with a protective hood that is prepared for the connection of the MSK FDO® CS cleaning set for compressed air-driven sensor cleaning (order information, see section 5.5 REPLACEMENT PARTS AND ACCESSORIES).</p>

1.4 Structure

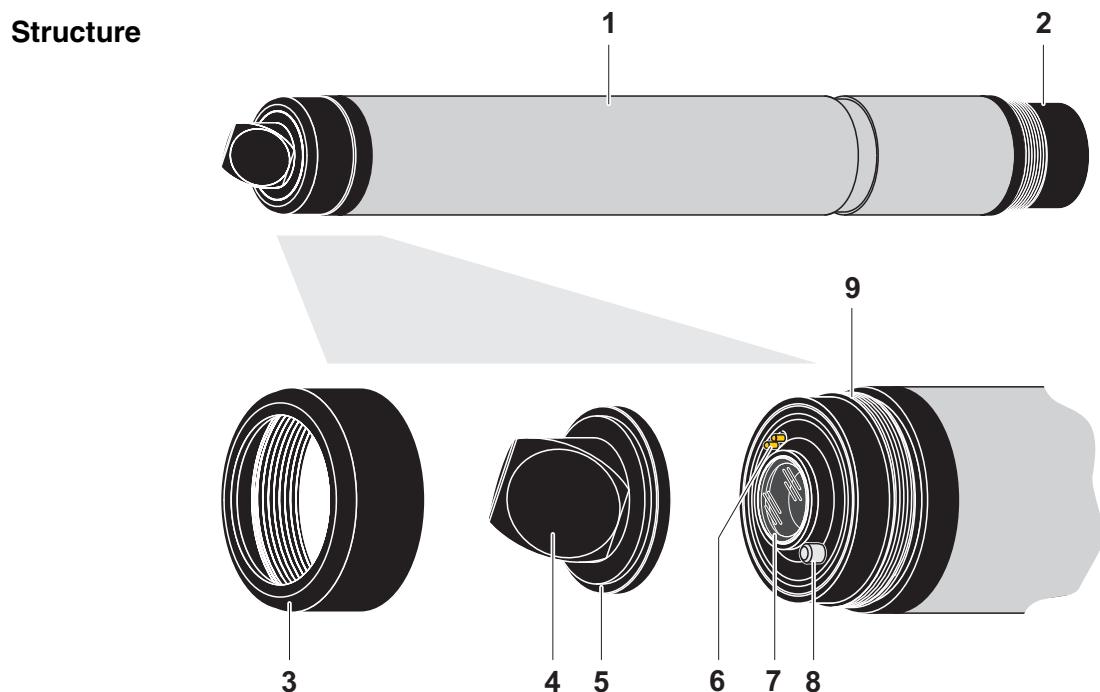


Fig. 1-2 Structure of the (Example: FDO® 70x IQ) D.O. sensor

1	Shaft
2	Connection head
3	Fixing ring
4	Sensor membrane
5	Sensor cap with memory chip
6	Gold-plated contact pins for memory chip
7	Measurement window
8	Temperature sensor and locking device
9	Sensor head

**Sensor cap with
memory chip**

A memory chip is integrated in the sensor cap. The following data are stored on the memory chip:

- Type designation of the sensor cap
- Series number
- Data of the factory calibration

**Intelligent membrane
(IQMC technology)**

For each membrane, the individual calibration values are determined by a factory calibration process and stored to the memory chip of the sensor cap, ensuring maximum accuracy over the whole lifetime of the sensor.

2 Safety

2.1 Safety information

2.1.1 Safety information in the operating manual

This operating manual provides important information on the safe operation of the product. Read this operating manual thoroughly and make yourself familiar with the product before putting it into operation or working with it. The operating manual must be kept in the vicinity of the product so you can always find the information you need.

Important safety instructions are highlighted in this operating manual. They are indicated by the warning symbol (triangle) in the left column. The signal word (e.g. "CAUTION") indicates the level of danger:



WARNING

indicates a possibly dangerous situation that can lead to serious (irreversible) injury or death if the safety instruction is not followed.



CAUTION

indicates a possibly dangerous situation that can lead to slight (reversible) injury if the safety instruction is not followed.

NOTE

indicates a situation where goods might be damaged if the actions mentioned are not taken.

2.1.2 Safety signs on the product

Note all labels, information signs and safety symbols on the product. A warning symbol (triangle) without text refers to safety information in this operating manual.

2.1.3 Further documents providing safety information

The following documents provide additional information, which you should observe for your safety when working with the measuring system:

- Operating manuals of other components of the measuring system (Power supply units, controllers, accessories)
- Safety datasheets of calibration and maintenance equipment (e.g. cleaning solutions).

2.2 Safe operation

2.2.1 Authorized use

The authorized use of the FDO® 70x IQ (SW) consists of its use as a sensor in the IQ SENSOR NET. Only the operation and running of the sensor according to the instructions and technical specifications given in this operating manual is authorized (see chapter 7 TECHNICAL DATA). Any other use is considered unauthorized.

2.2.2 Requirements for safe operation

Note the following points for safe operation:

- The product may only be operated according to the authorized use specified above.
- The product may only be supplied with power by the energy sources mentioned in this operating manual.
- The product may only be operated under the environmental conditions mentioned in this operating manual.
- The product may not be opened.

2.2.3 Unauthorized use

The product must not be put into operation if:

- it is visibly damaged (e.g. after being transported)
- it was stored under adverse conditions for a lengthy period of time (storing conditions, see chapter 7 TECHNICAL DATA).

3 Commissioning

3.1 Scope of delivery

- Sensor, consisting of sensor basis and sensor cap
- Operating manual.

3.2 IQ SENSOR NET system requirements

Software versions of the controller and terminal components

The operation of the FDO® 70x IQ (SW) requires the following software versions in the IQ SENSOR NET:

- | | | |
|---------------------|----------------------|------------------------|
| ● MIQ/C184 (XT) | Controller software: | Version 2.66 or higher |
| | Terminal software: | Version 2.66 or higher |
| ● MIQ/MC | Controller software: | Version 2.66 or higher |
| ● MIQ/T 2020 (PLUS) | Terminal software: | Version 2.66 or higher |
| ● IQ software pack | Software version: | 4.10 or higher |



Operation with the SC-FDO® 701 sensor cap requires software version 2.15 on the FDO® 70x IQ (SW).

3.3 Installation

Connection cable

A sensor connection cable of the SACIQ or SACIQ SW type is required to connect the sensor. The cable is available in different lengths. Compared to the standard model SACIQ, the SACIQ SW sensor connection cable is optimized regarding its corrosion resistance in seawater and brackish water and adapted for use in conjunction with the FDO® 70x IQ SW. Information on this and other IQ SENSOR NET accessories is given in the WTW catalog and on the Internet.



How to connect the sensor connection cable to the terminal strip of an MIQ module is described in chapter 3 Installation of the IQ SENSOR NET system operating manual.

Are the plug connections dry?

Before connecting the sensor and sensor connection cable, please make sure that the plug connections are dry. If moisture gets into the plug connections, first dry the plug connections (dab them dry or blow them dry using compressed air).



Do not suspend the sensor on the sensor connection cable. Use a sensor holder or armature. Information on this and other IQ SENSOR NET accessories is given in the WTW catalog and on the Internet.

Connecting the sensor to the sensor connection cable

- 1 Take the protective caps off the plug connections of the sensor and the SACIQ (SW) sensor connection cable and keep them safe.
- 2 Plug the socket of the SACIQ (SW) sensor connection cable onto the plug head connector of the sensor. At the same time, rotate the socket so that the pin in the plug head connector (1) clicks into one of the two holes in the jack.
- 3 Then, screw the coupling ring (2) of the sensor connection cable onto the sensor up to the stop.

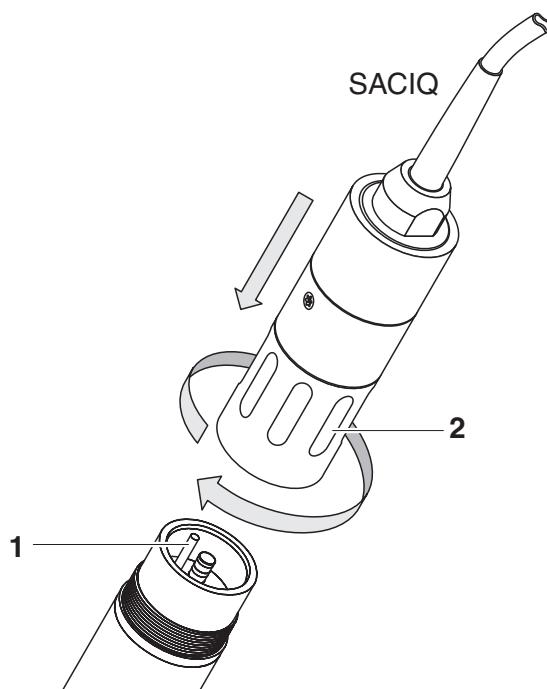


figure 3-1 Connecting the sensor

3.4 Commissioning / Getting the sensor ready for measurement

Identification in the IQ SENSOR NET

Both the sensor cap and sensor basis (sensor without cap) have a series number of their own. The sensor has to be equipped with a sensor cap for a successful login to the IQ SENSOR NET controller. The operable sensor is displayed as follows in the list of sensors:

- *Model:* Model designation of the sensor cap ("SC FDO 70x")
- *Ser. no.:* Series number of the sensor cap
- *Sensor name:* The series number of the sensor basis is preset here. You can change this entry as necessary by entering a user-defined name.

Commissioning steps

- 1 Pull the protective cap off the sensor.
- 2 If required, assign a user-defined name to the sensor (see IQ SENSOR NET system operating manual).
- 3 When using IQ SENSOR NET without automatic air pressure compensation the mean air pressure value or the location altitude has to be entered (for more detailed information see the relevant IQ SENSOR NET system operating manual).
- 4 Enter the average air pressure or the altitude of the installation site (for more detailed information, see the relevant IQ SENSOR NET operating manual).
- 5 Set up the sensor (see section 3.5).

3.5 Setting table for the FDO® 70x IQ (SW)

Carrying out settings

Using <S>, switch from the measured value display to the main menu of the settings. Then navigate to the setting menu (setting table) of the sensor. The procedure is described in detail in the IQ SENSOR NET system operating manual.

Setting	Selection/values	Explanation
<i>Measuring mode</i>	<ul style="list-style-type: none"> ● <i>Concentration</i> ● <i>Saturation</i> 	Unit of the measured value in the measured value display.
<i>Measuring range Concentration</i>	<ul style="list-style-type: none"> ● <i>0 ... 20.00 mg/l</i> ● <i>0 ... 20.00 ppm</i> 	These measuring ranges are available for selection.

Setting	Selection/values	Explanation
<i>Measuring range Saturation</i>	● 0 ... 200.0 %	The measuring range is permanently set.
<i>Response time t90</i>	<ul style="list-style-type: none"> ● 150 .. 300 s (with SC-FDO® 700) or ● 60 ... 300 s (with SC-FDO® 701) 	<p>Response time of the signal filter. Depending on the sample matrix, the measured values may fluctuate more or less. A signal filter in the sensor reduces the limits of variation of the measured value. The signal filter is characterized by the <i>Response time t90</i>. This is the time after which 90 % of a signal change is displayed.</p> <p>The setting range depends on the sensor cap type.</p>
<i>Calibration</i>	● <i>valid</i>	<i>valid</i> indicates that a valid calibration is available. The value cannot be changed.
	● <i>invalid</i>	<i>invalid</i> is displayed if the last calibration is invalid and the sensor is blocked for measurement. In this case you can change the value to <i>User calibration</i> , provided there is a valid calibration stored in the sensor or to <i>Factory calibration</i> . This is used to activate with the next exit from the setting table with <i>Save and quit</i> the last valid calibration stored in the sensor. Next time the setting table is opened, <i>valid</i> is displayed.
	● <i>Factory calibration</i>	Determines which calibration data the measured value calculation will be based on. The active calibration is displayed in the calibration history.
	● <i>User calibration</i>	The selection <i>User calibration</i> is only displayed if valid data of a <i>User calibration</i> is stored in the sensor.
	● <i>active</i>	<i>active</i> indicates that the sensor is being calibrated.
	● <i>abort</i>	If <i>abort</i> is selected, the active calibration is canceled the next time the setting table is quit with <i>Save and quit</i> .
<i>Test</i> (is displayed only during the sensor check, see section 4.2.2)	<ul style="list-style-type: none"> ● <i>active</i> ● <i>abort</i> 	<p><i>active</i> indicates that the sensor is being checked.</p> <p>If <i>abort</i> is selected, the active check is canceled the next time the setting table is quit with <i>Save and quit</i>.</p>

Setting	Selection/values	Explanation
<i>Temperature mode</i>	<ul style="list-style-type: none"> ● °C ● °F 	Unit of the measured temperature value (Celsius, Fahrenheit).
<i>Temp. adjustment</i>	-1.5 K ... +1.5 K	<p>The temperature compensation enables the temperature display to be balanced (shifting of the zero point by ±1.5K).</p> <p>Notes:</p> <ul style="list-style-type: none"> ● Due to the thermal capacity of the sensor, it is necessary to place it in a container with at least 2 liters of water. ● Leave the sensor in this container for at least 15 minutes while stirring occasionally until the balancing can be performed. <p>With temperature differences between the water and sensor > 10 °C, leave the sensor for at least 1 hour in this container while stirring occasionally until the balancing can be performed.</p>
<i>Salinity</i>	<ul style="list-style-type: none"> ● On ● Off 	Determines whether the entered salinity should be taken into account.
<i>Salinity input</i> (only with <i>Salinity = On</i>)	2.0 ... 70.0	<p>The entry of the salinity enables a salt content correction that compensates for the effect of salt contents > 0.1 % on the oxygen measurement.</p> <p>The salt content correction is recommended for measurements in salt-contaminated wastewater (salinity ≥ 2.0 corresponding to a conductivity of ≥ 3.4 mS/cm at a reference temperature $T_{REF} = 20 \text{ }^{\circ}\text{C}$).</p>
<i>Sensor cap data</i>	<ul style="list-style-type: none"> ● Do not download ● Transmit to log book 	Generates a log book message with all data stored in the sensor cap when the settings are quit with <i>Save and quit</i> (see section 1.4). When opening the menu again the setting is reset to <i>Do not download</i> .
<i>Save and quit</i>		<p>The settings are stored.</p> <p>The display switches to the next higher level.</p>
<i>Quit</i>		<p>The settings are not stored.</p> <p>The display switches to the next higher level.</p>



For information on oxygen measurement in solutions that contain salt, see WTW application report no. 1193118.

4 Measurement / operation

4.1 Measuring



CAUTION

Contact with the sample can lead to danger to the user! Depending on the type of sample, suitable protective measures must be taken (protective clothing, protective goggles, etc.).

Note the data given in section 7.2 APPLICATION CONDITIONS, especially the minimum immersion depth of the sensor (10 cm). The measured value is available immediately on submersing.



If keeping the sensor clean is a problem, we recommend using the compressed air-driven cleaning system with the CH cleaning head (see section 5.5 REPLACEMENT PARTS AND ACCESSORIES).

4.2 Function check and user calibration

4.2.1 General information

Factory calibration

The FDO® 70x IQ (SW) is factory calibrated. In the recommended application (see section 1.3 RECOMMENDED FIELDS OF APPLICATION), the measuring characteristics of the sensor cap remain stable for the specified service life. Thus, a user calibration is not usually required.

When does a function check or user calibration make sense?


A function check or user calibration can be useful in the following special cases:

- If the measured values appear to be implausible and it is assumed that the service life of the sensor cap is over
- Routinely within the framework of the company quality assurance

Check or calibration medium

Select one of the following two variants depending on the air temperature at the calibration site:

- With air temperatures over 5 °C, the function check and user calibration ideally take place in water vapor-saturated air. To do so, position the sensor approx. 2 cm above a water surface, for example in a narrow bucket or similar container with water. The membrane must be clean and dry for this.

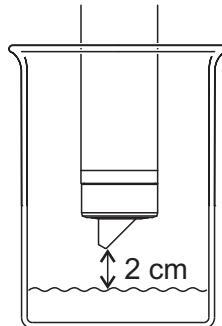

- With air temperatures under 5 °C we recommend performing the function check and user calibration not in air but in air-saturated water that has a higher temperature. You obtain air-saturated water by pouring water several times in and out of two vessels so that it sparkles.

4.2.2 Function check

A function check is the simplest way to determine whether the sensor needs to be cleaned or user-calibrated.

Principle	The function check can either be done in water vapor-saturated air or in air-saturated water (see CHECK OR CALIBRATION MEDIUM on page 17).
Outlet	Generally, a check on the IQ SENSOR NET is carried out as follows. System specific details are given in the respective IQ SENSOR NET system operating manual. <ol style="list-style-type: none">1 Switch to the measured value display with <M> and select the sensor FDO® 70x IQ (SW).2 Press <C>. The next step switches on the maintenance condition for the sensor. A message on this appears on the display.3 Confirm the note with <OK>. The maintenance condition is active.4 Select the <i>TEST</i> procedure and press <OK>.5 Put the sensor into the calibration position (water vapor-saturated air or air-saturated water - see section 4.2.1).

6 Press <OK>.

The sensor starts the check. The display switches to the measured value display. The *CAL* indicator flashes instead of the main measured value. At the same time, the momentary relative slope flashes as the secondary measured value with the addition of *TEST*. The process ends automatically as soon as the measured values meet the criterion for the stability control. With a great temperature difference between the sensor and the environment this may take a while. Subsequently, the main measured value and temperature are displayed.

7 Put the sensor in the measuring position again.

8 Wait for the measured value to be largely stable (temperature adjustment).

9 Switch off the maintenance condition.

Canceling the check

As long as the determination of the relative slope has not yet been started (step 6), you can quit the check with <M> or <ESC>.

The running determination of the relative slope (after pressing <OK> in step 6) can be aborted as follows:

1 Open the setting table (see section 3.5).

2 In the *Test* menu item, select the *abort* setting and then quit the setting table with *Save and quit*.

Evaluation

The result of the check is entered in the log book of the sensor. If the relative slope is outside the tolerance range (0.90 ... 1.10), the check is assessed as erroneous.



The information recorded in the log book entry is partly identical with that of the calibration history. The calibration history is described in detail in section 4.2.4 CALIBRATION HISTORY.

4.2.3 User calibration



We want to point out that the factory calibration of the membrane is highly precise due to the IQMC technology. If you still want to carry out a user calibration, influences due to environmental conditions have to be taken into account.

Principle

The user calibration can either be done in water vapor-saturated air or

in air-saturated water (see CHECK OR CALIBRATION MEDIUM on page 17). With the calibration procedure, the relative slope of the sensor is determined. The calibration is evaluated based on the relative slope and the intensity (successful <-> unsuccessful).

The result of the user calibration is stored in the calibration record and calibration history respectively and can be viewed afterwards (see respective IQ SENSOR NET system operating manual).

Outlet Generally, a user calibration on the IQ SENSOR NET is carried out as follows. System specific details are given in the respective IQ SENSOR NET system operating manual.

- 1 Switch to the measured value display with <M> and select the sensor FDO® 70x IQ (SW).
- 2 Press <C>. The next step switches on the maintenance condition for the sensor. A message on this appears on the display.
- 3 Confirm the note with <OK>. The maintenance condition is active.
- 4 Select the *CALIBRATION* procedure and press <OK>.
- 5 Put the sensor into the calibration position (water vapor-saturated air or air-saturated water - see section 4.2.1).
- 6 Press <OK>. The sensor determines the calibration data. The display switches to the measured value display. The *CAL* indicator flashes instead of the main measured value. At the same time, the momentary relative slope flashes as the secondary measured value. The process ends automatically as soon as the measured values meet the criterion for the stability control. With a great temperature difference between the sensor and the environment this may take a while. Subsequently, the main measured value and temperature are displayed.
- 7 If the user calibration was successful, bring the sensor into the measuring position again.
- 8 Wait for the measured value to be largely stable (temperature adjustment).
- 9 Switch off the maintenance condition.

Canceling the user calibration

As long as the determination of the calibration data has not yet been started (step 6), you can quit the calibration routine with <M> or <ESC>.

The running determination of calibration data (after pressing <OK> in

step 6) can be aborted as follows:

- 1 Open the setting table (see section 3.5).
- 2 In the *Calibration* menu item, select the *abort* setting and then quit the setting table with *Save and quit*.

After the user calibration was canceled the sensor again works with the calibration data that was used before the canceled user calibration.

Possible results of the user calibration

The calibration data are evaluated by the IQ SENSOR NET. A calibration procedure can have the following results:

Display	Explanation
Measured value display	Sensor was successfully calibrated. The calibration data can be viewed in the calibration history (section 4.2.4).
"____"	The sensor could not be calibrated. The sensor is blocked for further measurement. Notes on possible causes are given in the log book of the sensor.

4.2.4 Calibration history

Calibration history

MIQ/T2020	15 Dec 2006	00:13	?	!	①
Calibration history of selected sensor	330				
S01 SC F00 700	03270001				
Date	Rel.slope	Intens.	Res		
Factory	1.00	+	o.k.		
15.12.2006	0.77	+	Error		
04.11.2006	0.96	+	o.k.		
Range of tolerance 0.90 ... 1.10					
Return ESC					

Currently active calibration

Chronological list of the last user calibrations

figure 4-1 Calibration historyFDO® 70x IQ (SW)

The calibration history provides the following information:

Date	Calibration date (<i>Factory</i> = factory calibration)
Rel.slope	Relative slope (non-dimensional)

Intens.	Intensity: + : sufficient - : too low
Res	Evaluation of the calibration <i>o.k.</i> : Successful calibration. The new calibration data are taken over for measurement. <i>Error</i> : Calibration unsuccessful. Invalid calibration data were discarded. Measurement was continued with the last valid values.



The calibration history is stored in the sensor basis. If another sensor cap (with different series number) is mounted, the calibration history is deleted and cannot be restored afterwards.

4.2.5 Reactivating a valid calibration

The FDO® 70x IQ (SW) enables you to reactivate the last valid user calibration or the factory calibration. Thus you can immediately continue to measure if a calibration failed or you suspect that the calibration conditions were not optimally met.



Reactivating old calibration data is a temporary measure. Take into consideration that the sensor may provide wrong measured values. Ensure the correct functioning of the sensor by checking and/or recalibrating it.

Reactivating calibration data

- 1 Open the setting table (see section 3.5).
- 2 In the *Calibration* menu item, select the *User calibration* or *Factory calibration* setting and then quit the setting table with *Save and quit*.

5 Maintenance, cleaning, replacement parts

5.1 General maintenance notes



Maintenance condition

We recommend switching on the maintenance condition each time before removing the sensor from its measuring position. This avoids unintended reactions of linked outputs. More detailed information on the maintenance condition is given in the IQ SENSOR NET operating manual.



We do not recommend unscrewing the sensor from the sensor connection cable in order to do maintenance work. Otherwise, moisture and/or dirt can get into the plug connection where they can cause contact problems.


If you would like to disconnect the sensor from the sensor connection cable, please note the following points:

- Before disconnecting the sensor from the SACIQ (SW) sensor connection cable,
the sensor has to be cleaned on the outside (see section 5.4.1).
- Unscrew the sensor from the SACIQ (SW) sensor connection cable.
- Place a protective cap on the sensor plug head connector and on the SACIQ (SW) sensor connection cable each time so that no moisture or dirt can get on the contacting surfaces.
- In a corrosive environment, close the socket of the sensor connection cable (while it is dry) with the screw-on dust cover SACIQ-Plug to protect the electrical contacts against corrosion. The dust cover is available as an accessory (see section 5.5 REPLACEMENT PARTS AND ACCESSORIES). It is included in the standard scope of delivery of the SACIQ SW sensor connection cable.

5.2 Handling of the sensor cap

Despite its exterior robustness, the sensor is a high precision optical instrument. Therefore, special care should be taken when doing any maintenance or cleaning work:


- Dirt and moisture under the sensor cap can affect the functioning and shorten the service life of the sensor cap. Therefore, make sure the working environment is clean and dry prior to removing the sensor cap.

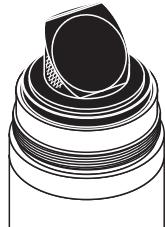

- Please do not touch the outer sensor membrane with your fingers. Touch the sensor cap at the sides only (shaded area in figure on the left).
- Avoid any great mechanical stress of the sensor membrane (pressure, scratches).
- Exposure to light, particularly daylight, of the interior of the sensor cap will, by-and-by, affect the measurement characteristics and shorten the service life of the sensor cap. Therefore, the interior of the sensor cap should not be exposed to direct sunlight. Avoid any exposure to light that exceeds the extent required for necessary maintenance and cleaning activities. Store dismantled sensor caps in a light-protected environment only.

5.3 Exchanging the sensor cap

Removing the sensor cap

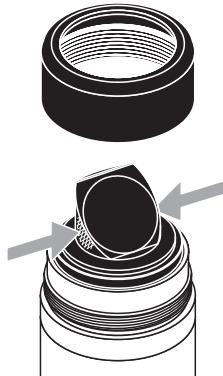


1	Pull the sensor out of the sample.
2	Clean the outside of the sensor (see section 5.4.1).
3	Unscrew the fixing ring from the sensor by hand.
4	Thoroughly clean and dry the sensor head once again.
5	Grasp the sensor cap on the sides (arrows in figure on the left) and remove it by pulling it away from the sensor in a <u>straight</u> upward direction.

NOTE

Do not push any tools or other sharp objects between the sealing surfaces. This might damage the sealing surfaces.

Mounting the sensor cap

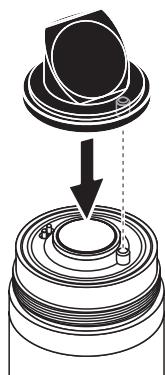

6	Check the front surface of the sensor for absolute cleanliness and clean it if necessary (see section 5.4.1).
7	Thoroughly clean the thread of the fixing ring.
8	Place the new sensor cap on the sensor so that the temperature sensor fits into the hole inside the sensor cap (see figure opposite).
9	Put the fixing ring on the sensor head and screw it tight by hand.

5.4 Cleaning the sensor

5.4.1 Exterior cleaning

Extreme dirt on the sensor can affect the measuring characteristics. Biological deposits for example, consume oxygen and can, when occurring on the sensor cap membrane, impair the responding behavior and cause values that are too low. Therefore, we recommend regular visual inspections and exterior cleaning as necessary.

Pay attention to the following points for cleaning:

- First, thoroughly rinse the sensor with tapwater to remove loosely adhering dirt.
- Rough dirt on the sensor shaft can be brushed off with a soft brush. Attention: Do not use the brush in the area of the sensor membrane. Risk of damage!
- The sensor cap including the sensor membrane should be wiped with a soft and moist microfiber cloth.
- In the case of persisting dirt you can add some household washing-up liquid to the tapwater. Attention: Never use any alcohol for cleaning!
- If there are any salt or lime deposits, the sensor can be cleaned with aqueous citric acid solution (10 percent by weight).

5.4.2 Interior cleaning of sensor cap and sensor head

If moisture or dirt have penetrated under the sensor cap, e.g. because the sensor cap is damaged, you can make the sensor ready for operation again as follows:

NOTE

Only use nonabrasive, alcohol-free detergents, as otherwise the optical surfaces could be damaged.

1	Remove the sensor cap (see section 5.3).
2	Clean the sensor head and sensor cap: <ul style="list-style-type: none">– Rinse all inner surfaces with tapwater– Remove contamination containing fat and oil with warm water and household washing-up liquid
3	Dry all surfaces with a clean, lint free cloth. A lint-free cloth such as a microfiber cloth used to clean eyeglasses is suitable.

- 4 Allow the sensor and sensor cap to dry completely at a dry location so moisture can evaporate even from corners difficult to access. When doing so, protect the inside of the sensor cap from light.



If the sensor cap is visibly damaged it has to be replaced.

5.5 Replacement parts and accessories

Description	Model	Order no.
Sensor cap	SC-FDO® 700	201 654
Sensor cap	SC-FDO® 701	201 655
Protective screw cap for sensor connection cable	SACIQ-Plug	480 065
Protective hood against damage caused by fish, with connection for the MSK FDO® CS cleaning set	MSK FDO®	205 253
Cleaning set for FDO® 70x IQ (SW) in conjunction with protective hood MSK FDO®	MSK FDO® CS	205 254

Components for compressed air cleaning system

Description	Model	Order no.
Cleaning head	CH	900 107
Active valve module (does not require a free relay output in the IQ SENSOR NET system)	MIQ/CHV PLUS	480 018
Valve module for the IQ SENSOR NET system 182 (external relay and compressed air supply)	DIQ/CHV	472 007
Air compressor to be triggered by relay, power supply 115 V AC	Cleaning Air Box - 115 VAC	480 017
Air compressor to be triggered by relay, power supply 230 V AC	Cleaning Air Box - 230 VAC	480 019

5.6 Disposal

Sensor We recommend disposing of the sensor and sensor caps as electronic
Sensor cap refuse.

6 What to do if...

**Sensor does not appear
in the measured value
display and list of
Sensors**

Cause	Remedy
Sensor cap not mounted or defective	<ul style="list-style-type: none"> – Sensor cap (see section 5.3) – Replace a defective sensor cap as necessary

**Measured value
implausible**

Cause	Remedy
Coating on sensor cap	Clean the outside of the sensor (see section 5.4.1)
Service life of the sensor cap over	<ul style="list-style-type: none"> – Check the sensor (see section 4.2.2) – Replace the sensor cap as necessary (see section 5.3)
Dirt inside the sensor cap and sensor head.	<ul style="list-style-type: none"> – Dismantle the sensor cap – Clean the insides of the sensor cap and sensor head (see section 5.4.2)
Fixing ring not properly tightened.	Mount the sensor cap correctly and tighten the fixing ring as far as it will go (see section 5.3)
Sensor cap untight or defective.	Replace a defective sensor cap as necessary

**Measured value
fluctuating heavily**

Cause	Remedy
Coating on sensor cap	See point "Measured value implausible"
Service life of the sensor cap over	
Dirt inside the sensor cap and sensor head.	
Fixing ring not properly tightened.	
Sensor cap untight or defective.	

Measured value invalid ("----" displayed)	Cause	Remedy
	User calibration unsuccessful. The sensor is blocked for measurement.	<ul style="list-style-type: none"> – As a temporary measure to quickly restore the readiness for service: Activate the factory calibration (see section 4.2.5) – For exact measurements, carry out a function check and repeat the user calibration if necessary.
Incorrect temperature display	Cause	Remedy
	Temperature sensor defective	Return the sensor
Measured value flashing	Cause	Remedy
	Maintenance condition is active	<ul style="list-style-type: none"> – If the maintenance condition was activated manually (e.g. by pressing the <C> key): Switch off the maintenance condition manually in the menu <i>Anzeige / Optionen</i> (see IQ SENSOR NET system operating manual) – If the maintenance condition was activated automatically (e.g. by the cleaning system): The maintenance condition will be deactivated automatically

7 Technical data

7.1 General measurement characteristics



The measurement characteristics are primarily determined by the sensor cap type. The relevant data are given in the sections 7.5 and 7.6.

Measuring principle	Optical measurement based on photoluminescence.	
Measurement in water	According to solubility function according to ISO 5814	
Measurement in salt-contaminated wastewater	Salinity input from 2.0 ... 70.0; corresponds to 3.4 mS/cm ... 86.2 mS/cm at T_{REF} 20 °C (salinity measurement according to IOT = International Oceanographic Tables)	
Temperature measurement	Temperature sensor	Integrated NTC
	Measuring range	- 5 °C ... + 50 °C (23 ... 122 °F)
	Accuracy	± 0.5 K
	Resolution	0.1 K
Temperature compensation	In the range -5 °C ... + 50 °C (23 ... 122 °F)	

7.2 Application conditions

Pressure resistance Sensor with connected SACIQ (SW) sensor connection cable:

Max. allowed overpressure	10^6 Pa (10 bar)
---------------------------	--------------------



The sensor meets all requirements according to article 3(3) of 97/23/EG ("pressure equipment directive").

Type of protection Sensor with connected SACIQ (SW) sensor connection cable:
IP 68, 10 bar (106 Pa)

Depth of immersion min. 10 cm; max. 100 m depth

Operating position Any

7.3 General data

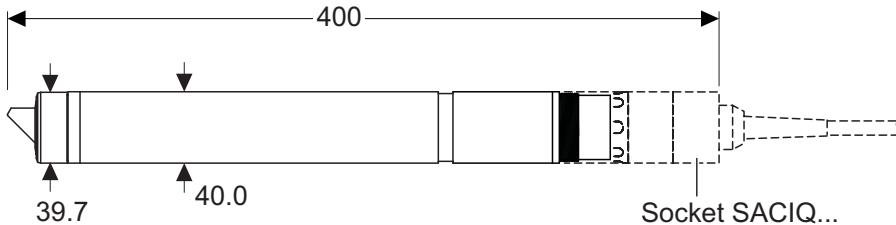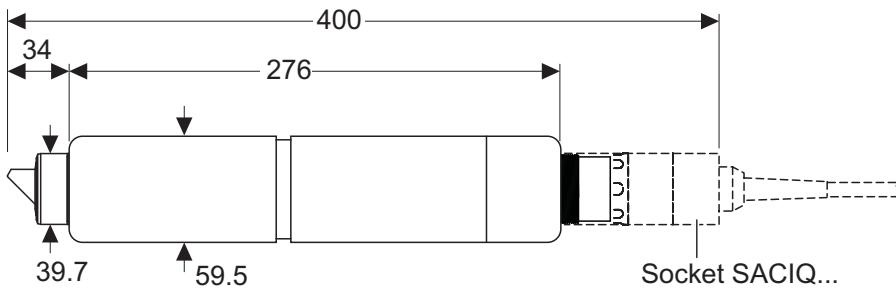Dimensions	<u>FDO 70x IQ:</u>  <u>FDO 70x IQ SW:</u> 
Weight (without sensor connection cable)	FDO® 70x IQ Approx. 900 g FDO® 70x IQ SW Approx. 1500 g
Connection technique	Connection via SACIQ (SW) sensor connection cable
Material	Shaft: – FDO® 70x IQ V4A stainless steel 1.4571 * – FDO® 70x IQ SW POM
Plug head connector housing	POM
Sensor head	POM and PVC
Sensor cap	See section 7.5 or section 7.6
Plug, 3-pole	ETFE (blue) Tefzel®
Fixing ring	POM
Protective hood (FDO® 70x IQ SW)	POM

* Stainless steel can be corrodible if there are chloride concentrations of 500 mg/L or more. For applications in such media we recommend to use the SW sensors.

Automatic sensor monitoring (SensCheck function)	Monitoring of the membrane function
Instrument safety	<p>Applicable norms</p> <ul style="list-style-type: none"> – EN 61010-1 – UL 3111-1 – CAN/CSA C22.2 No. 1010.1

7.4 Electrical data

Nominal voltage	max. 24 VDC via the IQ SENSOR NET (details see chapter TECHNICAL DATA of the IQ SENSOR NET operating manual)
Power consumption	0.7 W
Protective class	III

7.5 Technical data of the SC-FDO® 700

Measuring ranges and resolution	D. O. partial pressure 0 ... 400 hPa	
	Measuring mode	Adjustable measuring range
	D. O. concentration	0 ... 20.00 mg/L 0 ... 20.00 ppm
	D. O. saturation	0 ... 200.0 %
Measurement accuracy	in the range	Accuracy
	< 1 mg/L (ppm)	± 0.05 mg/L (ppm)
	> 1 mg/L (ppm)	± 0.1 mg/L (ppm)
Repeatability	± 0.05 mg/L (ppm) according to EN ISO 15839	
Response time	t_{90} (90 % of the final display value after) < 150 s according to EN ISO 15839 t_{95} (95 % of the final display value after) < 200 s according to EN ISO 15839	

Minimum approach flow	No incident flow required	
Interferences	Non-sensitive to hydrogen sulfide, chlorine, and ionogenic substances	
Allowed temperature range	Measuring medium	-5 °C ... + 50 °C (23 ... 122 °F)
	Storage/transport	- 10 °C ... + 50 °C (14 ... 122 °F)
Allowed pH range of the measuring medium	4 ... 12	
Calibration procedures	Factory calibration by means of IQMC (Intelligent Membrane Calibration) procedure. User calibration possible in water vapor-saturated air or air-saturated water.	
Materials	PMMA, PVC and silicone	
Working life	2 years guaranteed with authorized use	

7.6 Technical data of the SC-FDO® 701

Measuring ranges and resolution	D. O. partial pressure 0 ... 400 hPa				
	Measuring mode	Adjustable measuring range	Resolution		
	D. O. concentration	0 ... 20.00 mg/L 0 ... 20.00 ppm	0.01 mg/L 0.01 ppm		
	D. O. saturation	0 ... 200.0 %	0.1 %		
Measurement accuracy	in the range	Accuracy			
	< 1 mg/L (ppm)	± 0.05 mg/L (ppm)			
	> 1 mg/L (ppm)	± 0.1 mg/L (ppm)			
Repeatability	± 0.05 mg/L (ppm) according to EN ISO 15839				
Response time	t ₉₀ (90 % of the final display value after) < 60 s according to EN ISO 15839 t ₉₅ (95 % of the final display value after) < 80 s according to EN ISO 15839				
Minimum approach flow	No incident flow required				

Interferences	Non-sensitive to hydrogen sulfide, chlorine, and ionogenic substances	
Allowed temperature range	Measuring medium	- 5 °C ... + 40 °C (23 ... 104 °F)
	Storage/transport	- 10 °C ... + 50 °C (14 ... 122 °F)
Allowed pH range of the measuring medium	4 ... 12	
Calibration procedures	Factory calibration by means of IQMC (Intelligent Membrane Calibration) procedure. User calibration possible in water vapor-saturated air or air-saturated water.	
Materials	PMMA, PVC and silicone	
Working life	6 months guaranteed for authorized use under the specified environmental conditions	

8 Indexes

8.1 Explanation of the messages

This chapter contains a list of all the message codes and related message texts for the FDO® 70x IQ (SW) sensor.



Information on

- the contents and structure of the log book and
- the structure of the message code

See IQ SENSOR NET system operating manual, chapter LOG BOOK.

The last three digits of the message code identify the source of the message:

- 334 = SC FDO 700 (sensor cap SC-FDO® 700)
- 335 = SC FDO 701 (sensor cap SC-FDO® 701)
- 531 = FDO700IQ (sensor basis / component class, adapter ADA)

8.1.1 Error messages

Message code

Message text

EA133x

Meas. range exceeded or undercut
* Check process
* Select other meas. range

EA233x

Sensor temperature too high!
* Check process and application

EA333x

Sensor temperature too low!
* Check process and application

EAP531

Measurement interfered
* SensCheck: Sensor cap is missing, leaky, depleted, or defective
* Clean sensor and space between cap and sensor according to op.instructions
* Screw on sensor cap securely
* Replace sensor cap

EC833x

*Sensor could not be calibrated,
sensor blocked for measurement*
Cause: instable signal
* Check temperature adjustment
* Check calibration conditions (see operating manual)
* Repeat calibration

Message code	Message text
EC933x	<p><i>Calibration error, measurement disabled</i></p> <p><i>Cause: Sensor cap is missing, leaky, depleted, or defective</i></p> <ul style="list-style-type: none">* <i>Clean sensor and space between cap and sensor according to op.instructions</i>* <i>Screw on sensor cap securely</i>* <i>Repeat calibration</i>* <i>Replace sensor cap</i>
EI333x	<p><i>Operational voltage too low</i></p> <ul style="list-style-type: none">* <i>Check installation and cable lengths, Follow installation instructions</i>* <i>Power supply module overloaded</i>* <i>Check terminal and module connections</i>* <i>Defective component, replace components</i>
EI433x	<p><i>Operational voltage too low, no operation possible</i></p> <ul style="list-style-type: none">* <i>Check installation and cable lengths, Follow installation instructions</i>* <i>Power supply module overloaded</i>* <i>Check terminal and module connections</i>* <i>Defective component, replace components</i>
ES133x	<p><i>Component hardware defective</i></p> <ul style="list-style-type: none">* <i>Contact service</i>

8.1.2 Informative messages

Message code	Message text
IC133x	<i>Sensor has been successfully calibrated * For calibration data, see calibration history</i>
IC333x	<i>Factory calibration has been activated. Make sure the sensor operates correctly.</i>
IC433x	<i>Last valid calibration has been activated. Make sure the sensor operates correctly.</i>
IC533x	<i>Invalid user calibration has been replaced by last valid user calibration. Caution! Wrong measured values possible. Carry out a new successful calibration to make sure the sensor operates correctly.</i>
IC633x	<i>The invalid user calibration was replaced by the factory calibration. Caution! Wrong measured values possible. Check whether the sensor operates correctly or carry out a new successful calibration.</i>
IC733x	This message displays the result of the last check (see section 4.2.2)
IS133x	This message displays the information stored in the sensor cap (see section 1.4)

8.2 Status info

The status info is a coded piece of information on the current status of a sensor. Each sensor sends this status info to the controller of the IQ SENSOR NET. The status info of sensors consists of 32 bits, each of which can have the value 0 or 1.

Status info, general structure

0 1 2 3 4 5 6 7	8 9 10 11 12 13 14 15	
1 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0	(general)
0 0 0 0 0 0 0 0	0 0 0 0 0 0 0 0	(internal)
16 17 18 19 20 21 22 23	24 25 26 27 28 29 30 31	

The bits 0 - 15 are reserved for general information.

The bits 16 - 21 are reserved for internal service information.

You obtain the status info:

- via a manual query in the menu *Einstellungen/Settings/Service>List of all components* (see IQ SENSOR NET system operating manual)
- by an automated query
 - from a superordinate process control (e. g. when connected to the Profibus)
 - from the IQ Data Server (see IQ SENSOR NET Software Pack operating manual)



The evaluation of the status info, e.g. in the case of an automated query, has to be made individually for each bit.

Status info FDO® 70x IQ (SW)

Status bit	Explanation
Bit 0	<i>Component hardware defective</i>
Bit 1	<i>Sensor cap missing, untight, depleted or defective</i>
Bits 2-31	-

What can Xylem do for you?

We're a global team unified in a common purpose: creating innovative solutions to meet our world's water needs. Developing new technologies that will improve the way water is used, conserved, and re-used in the future is central to our work. We move, treat, analyze, and return water to the environment, and we help people use water efficiently, in their homes, buildings, factories and farms. In more than 150 countries, we have strong, long-standing relationships with customers who know us for our powerful combination of leading product brands and applications expertise, backed by a legacy of innovation.

For more information on how Xylem can help you, go to xyleminc.com.



Service address:

Xylem Analytics Germany

Sales GmbH & Co. KG

WTW

Dr.-Karl-Slevogt-Str. 1

82362 Weilheim

Germany

Tel.: +49 881 183-325

Fax: +49 881 183-414

E-Mail wtw.rma@xyleminc.com

Internet: www.WTW.com



Xylem Analytics Germany GmbH

Dr.-Karl-Slevogt-Str. 1

82362 Weilheim

Germany