


# VP6-ST/...

## Sensor-Anschlusskabel

### Anschluss Inpro 4250 an Stratos e 2211 X pH Messumformer Connection of an InPro 4250 to a Stratos e 2211 X pH transmitter

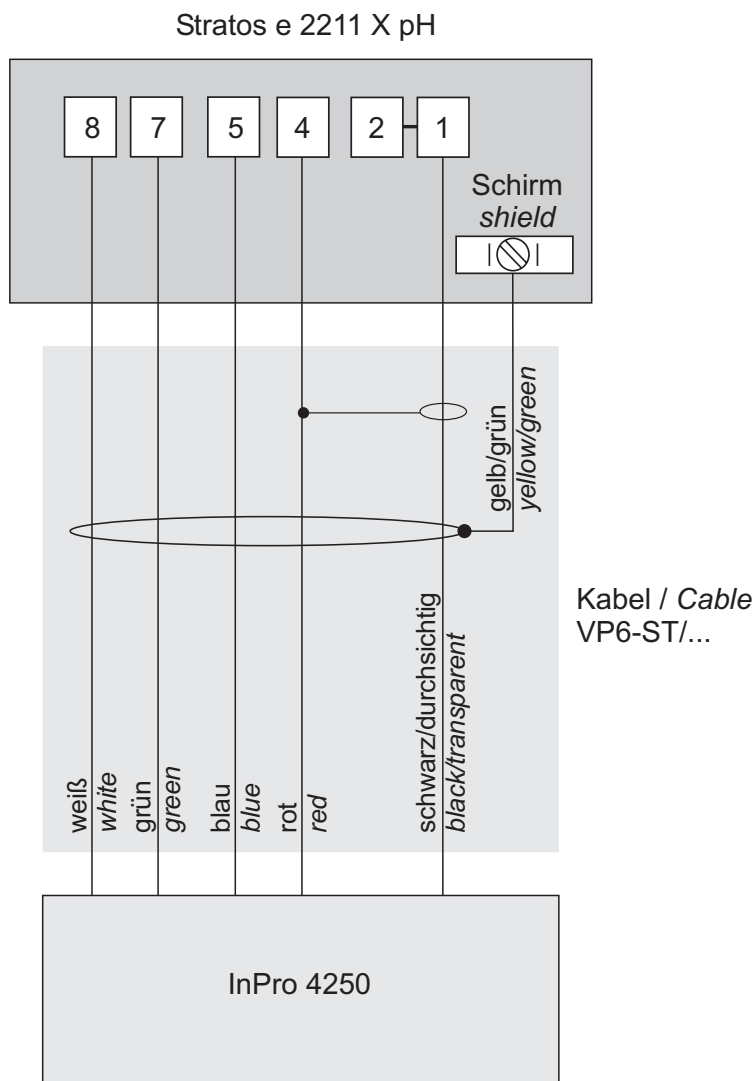

#### Klemmleiste Stratos e 2211 X pH:

Nr.	Belegung
1+2	Glaselektrode
4	Referenzelektrode
5	Hilfselektrode
7	Temperaturmessfühler
8	Temperaturmessfühler

#### Terminal Stratos e 2211 X pH:

No.	Assignment
1+2	Glass electrode
4	Reference electrode
5	Auxiliary electrode
7	Temperature probe
8	Temperature probe



## **Wissenschaftlich-Technische Werkstätten GmbH**

Dr.-Karl-Slevogt-Straße 1  
D-82362 Weilheim

Germany

Tel: +49 (0) 881 183-0  
+49 (0) 881 183-100  
Fax: +49 (0) 881 183-420  
E-Mail: [Info@WTW.com](mailto:Info@WTW.com)  
Internet: <http://www.WTW.com>